How to set AUTO-SIM function?

- a. Open AT command port (Please refer to Slide 2)
- b. Send the commands below:

```
//set auto-sim

AT!ENTERCND="A710"

AT!impref="AUTO-SIM"


AT!RESET
```

Note: Please confirm the Firmware/PRI has been downloaded to the module.



How to use AT command for SDX55 chipset on Windows (EM91 Series/EM7690)?

 For MBPW Release 31 or newer, please add "EnableUDE=1" in configuration.ini, then install the driver.

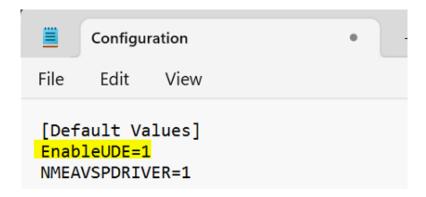

- Open Device Manager and find Modem Port
- Right click -> properties -> Modem -> Port: COMx
- The example is COM13

